



SPECIFICATION:

Spring-loaded hinge attached to the hinged edge of the shutter remains shutter to be closed by spring force. While opening the shutter weight will keep the shutter open. Spring make an easier the door lifting and closing.

- Product code: 200.2. The surface - mounted hinge.
- Material: Aisi 304, all parts. Bearing: Brass
- Adjustable spring force (spring Aisi 304 – spring steel)
- The spring is locked with a screw in the set position

INSTALLATION INSTRUCTIONS:

- The hinge is fitted in before the spring adjusting.
- Hinge should be mounted so, that spring adjuster will remain in the left side (see the picture).
- Long mounting holes make an easier the mounting of hinge / door to the right place.
- When the door or the door hinges are all in place, apply an appropriate spring tension with the consideration of the gate weight and desired smoothly closing.
- The spring can be adjusted by 4 mm pin placed into oblong holes of the spring adjuster. Spring have to be tighten into the direction of the arrow (closing direction of hinge), regardless of on which side the gate will be installed.
- When the final tension is reached, lock the spring by the screw.
- In critical applications using a threadlocker is a must! ER 10.8.2015



Spring adjusting direction

